


TECHNOTE
[3/2015]

DATE: January, 2015
AUTHOR: cardPresso TECHNICAL SUPPORT
PRODUCT/AREA: Encode

How to configure Omnikey 5427 to read only Prox frequency


To configure HID Ominey™ 5427 only to read Prox frequency please follow the procedure below:

Click in the **Contactless Config » Polling Config** and disable all the options except **Prox**.

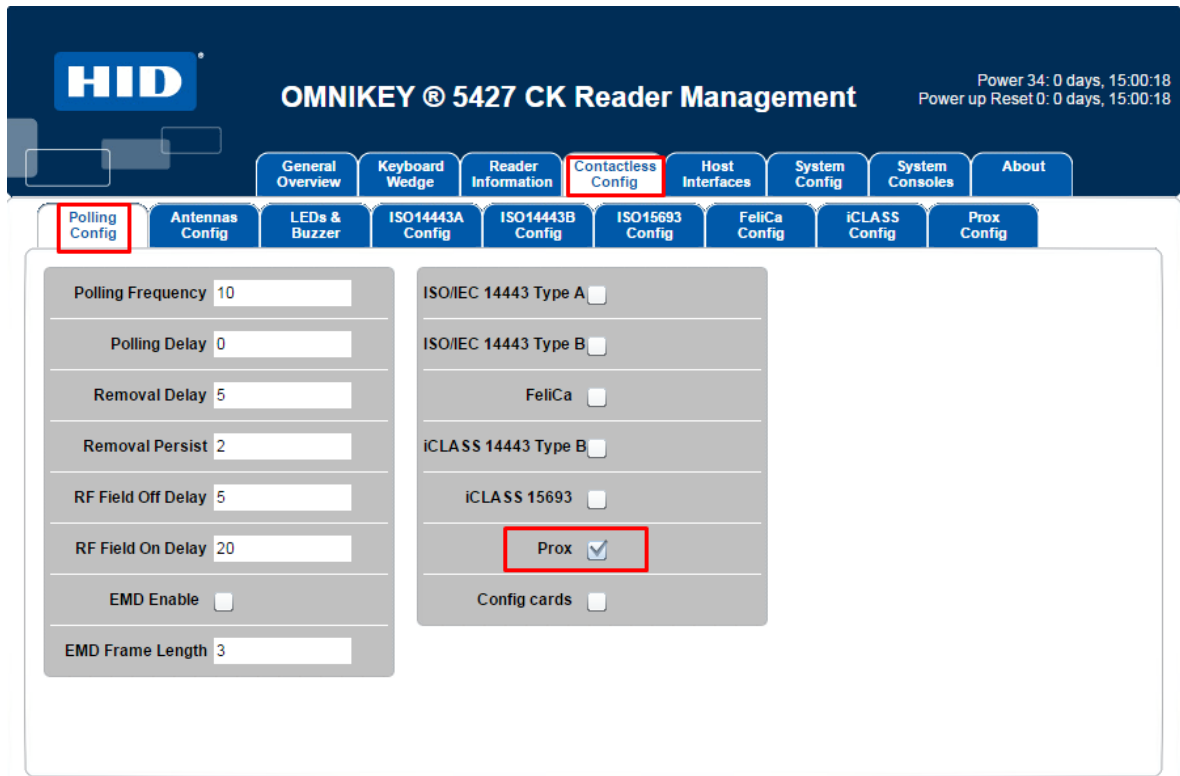

© HID Global Corporation 2011-14

After that please click in the Contactless Config » Prox Config tab and confirm that the option Prox Enable is selected and PROX_STANDARD option is selected in the ATR Mode dropdown list.

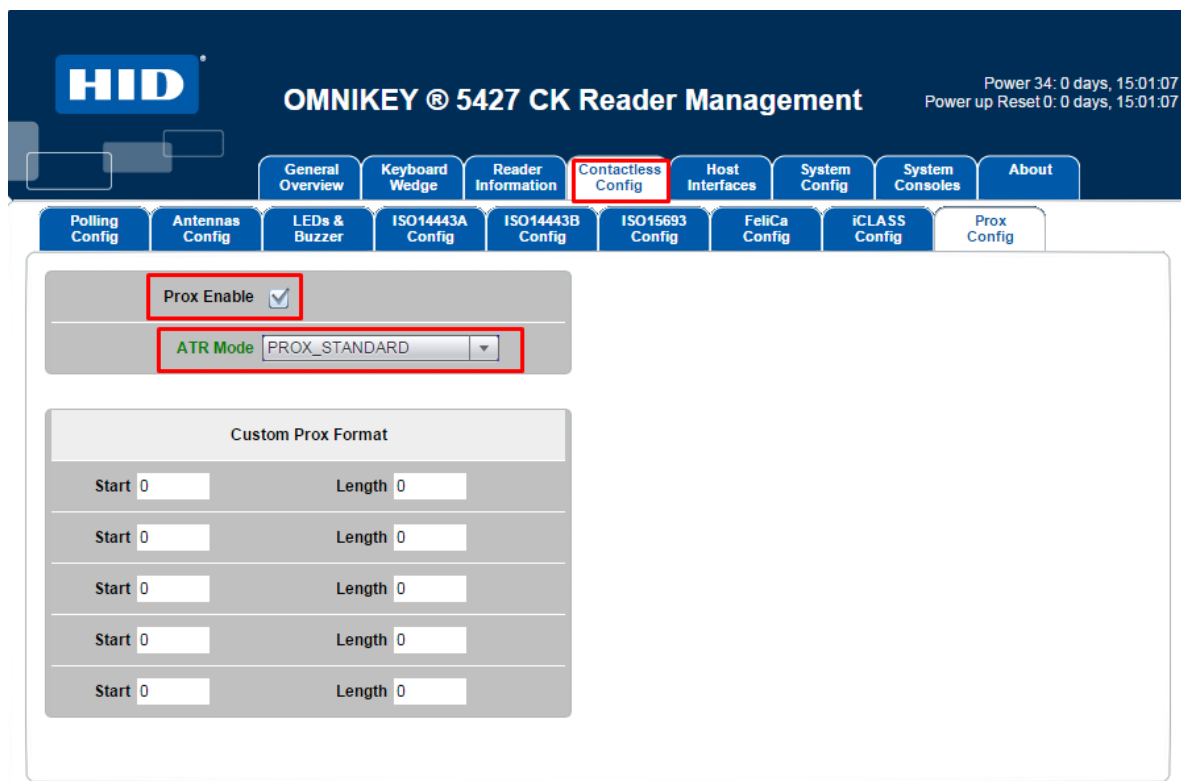

© HID Global Corporation 2011-14

After settings configuration you need to apply and save the changes.

Please go to **System Config** tab and click:

1. Apply changes;
2. Store changes;
3. Reboot System.

The screenshot shows the HID OMNIKEY 5427 CK Reader Management web interface. The 'System Config' tab is active. On the right side, three buttons are highlighted with red boxes and numbered: 1. Apply Changes, 2. Store Changes, and 3. Reboot System. The interface includes various configuration options like Update Firmware, Upgrade SDR, Upload Config, Encrypt Firmware, Load Key Layout, Export Config, Signing Key, Verification Key, Current Access Password, Set Access Password, Password timeout (mins), and Confirm Access Password.

© HID Global Corporation 2011-14